

# SAP1626

## SOURCE ASSIGN PANEL

### BOP220

#### I/O CONNECTOR TRANSLATION ASSEMBLY

# RTS™



## Introduction

Model SAP1626 Source Assign Panel provides a convenient means of assigning any one of 12 intercom channels and/or three program audio channels to 26 individual or groups of intercom user stations. Viewed as a “matrix switch”, it transforms a basic two bus intercom system into a 15 bus system.

When used as an intermediary between Series 800 (conference-line) Master Stations and TW Intercom System user stations, the SAP1626 distributes the master station channels to each group of user stations.

While the master stations have multiple channel capability and can access a number of lines independently or simultaneously, user stations have only two channel capability. The SAP1626 programs each user station to correspond with the same channels on the master stations. Once the channel assignments are made, the master station selectively communicates with any combination of user stations programmed on different channels.

The SAP1626 can also be used to assign channels in a 15 channel user station system configuration without master stations.

## Assignment

Any one of the 12 intercom channels (input buses) or 3 program channels can be assigned to any one of the 26 output lines; each line consists of two separate feeds from the SAP1626. For example, a given user station may be assigned intercom channels 1 and 4. Another station may be assigned intercom channel 1 and program source 3. Almost any combination of channels can be assigned with up to six headset user stations, the output of two thumbwheel switch groups, on a common string.

## Outputs

Output pairs 1 thru 6 are designated for television camera intercom. Output connections can be made directly to each camera.

To treat the camera outputs as conventional user station outputs the output pairs can be configured as either 12 single-channel or 6 two-channel outputs. Alternatively, a special cable (SV-3) assembly (25-pin D to 50-pin microribbon) can be used to connect the SAP1626 to a second BOP220 using 6 of the 20 outputs.

Outputs 7 through 26 are designated “external” and exit the SAP1626 via two 50-pin microribbon (4015 cables) connectors. At this point the signals are distributed through the BOP220 for direct connection to the TW Intercom user stations.

# SAP1626

## SOURCE ASSIGN PANEL

### BOP220

#### I/O CONNECTOR TRANSLATION ASSEMBLY

# RTS<sup>TM</sup>

### **SAP1626 Specifications**

<b>Maximum Switch Carrying Current</b>	2.0 amps per output
<b>Maximum Switch Breaking Current</b>	0.5 amps per output
<b>Inputs</b>	
Intercom Levels	12 lines, full-duplex 2 volts p-p nominal In and out
<b>Program</b>	3 sources, simplex
Input Impedance	800 ohms
Input Level Range	-4dBm to + 8dBm
<b>Outputs</b>	
User Station	20
Camera	6
<b>Power Requirements</b>	Power is derived from the TW Intercom Power Supply(s)
<b>Dimensions/Weight</b>	3.46"H x 19.0"W x 9.8" D - 10lbs 88H x 484W x 249D mm - 4.5 kg.
<b>Finish</b>	Light grey enamel

### **BOP220 Specifications**

<b>Inputs</b>	Two 50-pin male microribbon connectors
<b>Outputs</b>	Twenty 3-pin male XLR-type connectors
<b>Dimensions/Weight</b>	5.46"H x 19.0"W x 5"D - 2.53lbs 133H x 484W x 127D mm - 1.1kg
<b>Finish</b>	Gold Iridite

### **BOP220 I/O Connector Translation Assembly**

The BOP220 Break Out Panel interfaces the SAP1626 and the TW Intercom user stations. It is a passive routing device (no electronics) which converts the two 50-pin connectors from the SAP1626 to 20 XLR-type 3-pin male connectors


### **Packaging**

The SAP1626 fits into a standard EIA equipment rack and requires two rack units. The BOP220 requires three rack units and mounts directly behind the SAP1626; it is inset from the rear rack rails to allow for cable connections.

Each connector on the BOP220 is numbered with respect to its pair of the thumbwheel switches on the SAP1626. This allows for easy system connections as well as rapid disconnection in the event of a faulty line.



**BOP220**

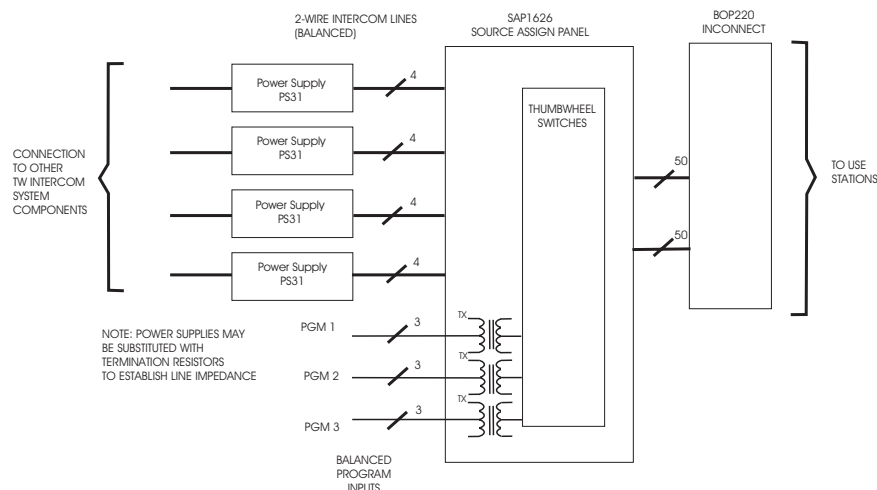

**Typical System Configuration**

### **CONTACT US**

Telex Communications, Inc.  
12000 Portland Avenue South  
Burnsville, MN 55337  
Telephone: 800-392-3497  
Fax: 800-323-0498